



Portable Electric Heater – FF3 Operating instructions

IMPORTANT NOTE

**FAILURE TO FOLLOW THESE INSTRUCTIONS COULD DAMAGE THIS EQUIPMENT &
WILL INVALIDATE THE WARRANTY**

Operating Instructions for the FF3 electric heater

Please ensure you have read and understood these instructions fully, **BEFORE** attempting to operate this FF3 heater

General Safety

Never place anything on top of the unit and never obstruct its air intake / exhaust grills. Leave a 600 mm gap all round the unit to let the air circulate.

Always switch the heater **OFF** and unplug when not in use

The FF3 portable heater is fitted with a safety limited 'over temperature' thermostat. Should the designed operating temperature be exceeded, this will open circuit the elements.

This will automatically reset as the temperature reduces

Maximum ambient working temperature for the FF3 heater is 40 degrees centigrade

In area's where several heaters are used simultaneously the positioning of the units is an important consideration

Electrical Safety

These models are available in either 230v or 110v format

230v model, connects to a standard 3 pin 13amp 1 phase 50Hz, 230v socket via its moulded mains lead

110v model, connects to an adequately rated transformer (must be CONTINUOUSLY rated) via its 32 Amp plug

THESE MODELS ARE DESIGNED FOR INTERNAL USE ONLY. DO NOT USE EXTERNALLY

Extension leads should be correctly rated for the inductive load, fully unwound, loosely coiled and never run through water or over sharp edges

Never remove any panels / covers whilst the unit is connected to electrical supply

If problems cannot be easily & safely rectified immediately contact London Cool on **0800 440 444**. Maintenance should only be attempted by competent personnel in accordance with the instructions or suppliers guidelines.

Set up & Operation

Do not site the unit close to soft fabrics which could be sucked over the intake grill, blocking the airflow into the unit causing it to overheat. Allow an air gap of at least 600mm to the front and rear of the unit to ensure a clear air-flow

To Start

Connect to a suitable electrical supply

The ON / OFF selector 'rocker' switch has the following settings

- O. OFF. Power is to the switch only
- I. ON. Power is to the whole unit. As a safety feature, the fan motor is designed to run IMMEDIATELY upon application of power. Ensure that the fan is running

To Stop

Move the ON / OFF switch to position O

London Cool portable air conditioner & heater rental & sales

This document has been compiled in good faith, but no representation is made or warranty given (either express or implied) as to the completeness or accuracy of this information